

Keep your ActiveKEY within acceptable operating temperatures

Your ActiveKEY is designed to operate in temperatures between 14° and 140°F (-10° and 60°C). Low- or high-temperature conditions may shorten battery life or cause the ActiveKEY to malfunction.



DO NOT leave an ActiveKEY in hot environments, including a car, because temperatures in parked cars can exceed this range.



imagination at work