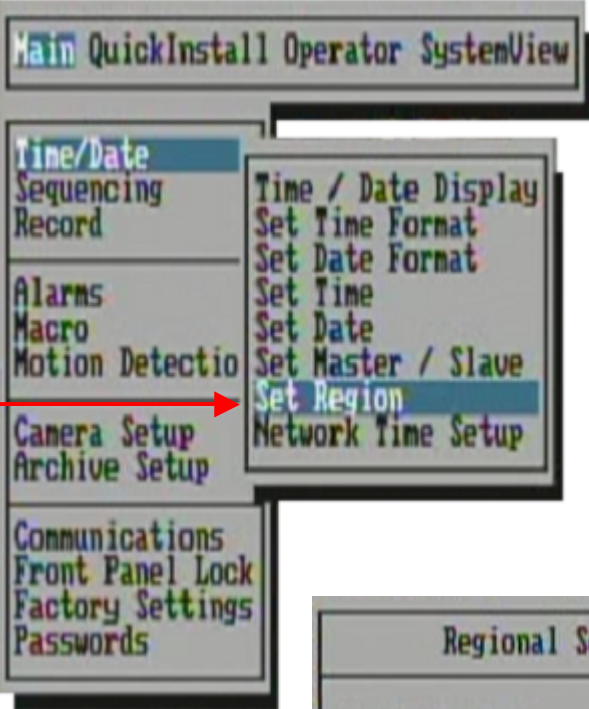
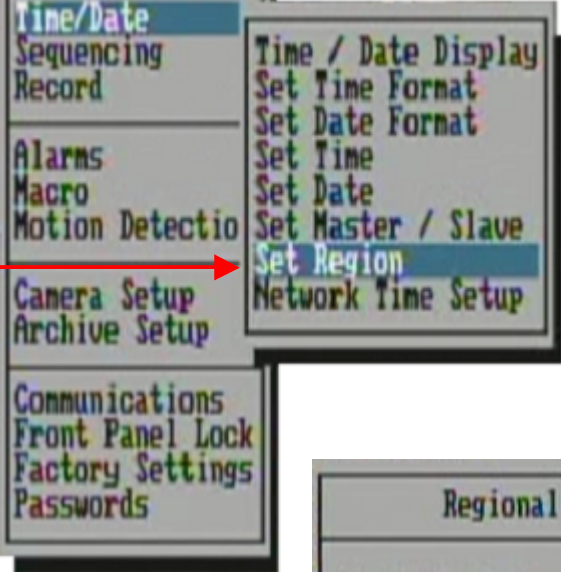
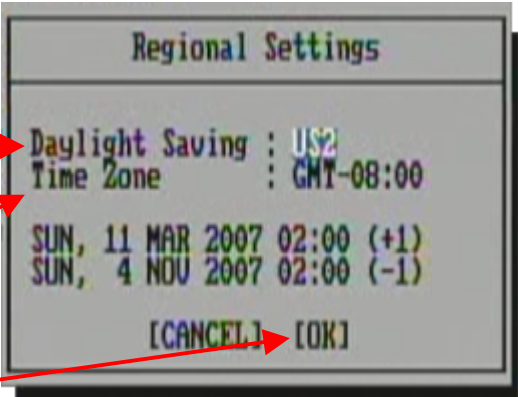
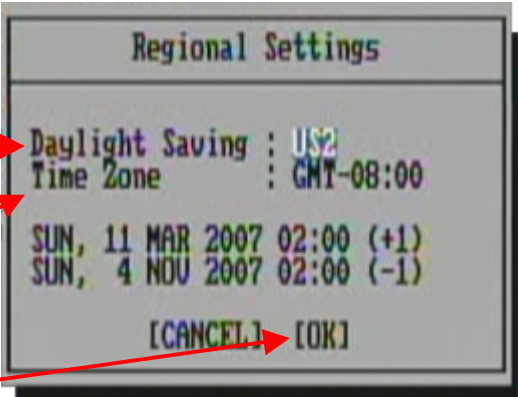
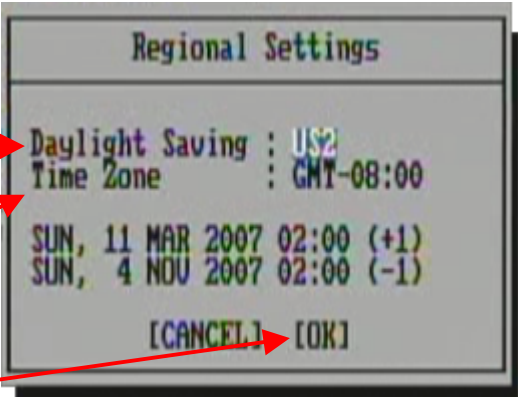


How to Change Settings for New DST

These instructions are for the DVMRe, StoreSafe, DSR, series recorders and the SymDec1 (VSR) and SymDec4 (VSR-4) digital recorders using the menu system. Refer to the user manual for instructions to access the menus.

1. Select the Time/Date menu of your recorder. 
2. Select "Set Region". 
3. Set Daylight Saving to "US2". 
4. Set the "Time Zone" according to your location. Eastern Time is GMT-05:00 and Pacific Time is GMT-08:00. 
5. Select OK and press Enter to apply the change. 

These instructions are for the SymNet, SymDec1 (VSR) and SymDec4 (VSR-4) digital products using the web interface.

1. To update settings you must connect to the web server using I.E. Type the IP Address in the "Address" box and press the <Enter> button. This will bring up a login window. Enter the Username and Pass Word and then click on OK. Default is "admin" for both in lower case. This will get you to the Home page.
2. From the Home page click on "Configure", and then click on Network Time Protocol Settings.
3. Set the Daylight Savings setting to "US2".
4. Set the "GMT Offset" according to your location. Eastern Time is GMT-05:00 and Pacific Time is GMT-08:00.
5. For this to work on a SymNet product there must be a NTP server accessible over the network connection and an update interval programmed.
6. When all settings are complete, click on the Save button.

Home | SymBrowser | Configure | Info | Upgrade

Configuration

Network Time Protocol Configuration

Update Interval	Once per day
NTP Primary Server	192.168.1.7
NTP Backup Server	204.123.2.72
Daylight Savings	US2
GMT Offset	-8h

Last updated at 02/23/2007 12:35:09

Save Cancel

These instructions are for the Digi-4 digital recorder using the menu system. Updating the DST settings using the Digia Client software is not available. Refer to the user manual for instructions to access the menus.

1. From the SETUP menu navigate to the "System" menu item and press SEL.
2. Navigate to the "Daylight Saving" menu item and then press the RIGHT arrow to turn it ON.
3. Press SEL to access the DAYLIGHT SAVING page. Then use the RIGHT and LEFT arrows to set "START TIME" to "VAR."
4. Use the DOWN arrow to highlight "START TYPE" and then press SEL to go to the DLS TIME page.
 - a. Use the RIGHT and LEFT arrows to set "WEEK ORDER" to "2nd."
 - b. Use the DOWN arrow to highlight "WEEK DAY" and use the LEFT and RIGHT arrows to set it to "SUN".
 - c. Use the DOWN arrow to highlight "MONTH" and use the LEFT and RIGHT arrows to set it to "03".
 - d. Use the DOWN arrow to highlight "HOUR" and use the LEFT and RIGHT arrows to set it to "02". Then press the ESC button to return to the DAYLIGHT SAVING page.
5. Use the DOWN arrow to highlight "END TIME". Then use the RIGHT and LEFT arrows to set it to "VAR."
6. Use the DOWN arrow to highlight "END TYPE" and then press SEL to go to the DLS TIME page.
 - a. Use the RIGHT and LEFT arrows to set "WEEK ORDER" to "1st."
 - b. Use the DOWN arrow to highlight "WEEK DAY" and use the LEFT and RIGHT arrows to set it to "SUN".
 - c. Use the DOWN arrow to highlight "MONTH" and use the LEFT and RIGHT arrows to set it to "11".
 - d. Use the DOWN arrow to highlight "HOUR" and use the LEFT and RIGHT arrows to set it to "02". Then press the ESC button to return to the DAYLIGHT SAVING page.
7. Use the DOWN arrow to highlight "ADJUSTMENT" and then press SEL to set the minutes to 060. Use the UP and DOWN arrows to change values. Use the LEFT and RIGHT arrows to move the cursor.
8. When done press ESC to return to the DAYLIGHT SAVINGS page to verify your settings. Then press ESC two more times to return to the SETUP menu.
9. Navigate to SAVE SETUP and press SEL. Then press the RIGHT arrow to highlight "YES" and press SEL. When you return to the SETUP menu press ESC again to return to normal operation. The Digi-4 is set for the new DST settings.

NOTE: If you ever need to update time on the Digi-4, you must enter the Standard Time for you area. During the Daylight Saving Time period of the year (between March 11 and November 4) any time you enter will be increased by one hour automatically.